

Nikon		
Model	Control	Live view
Nikon D33	☑	☑
Nikon D3s	☑	☑
Nikon D3x	☑	☑
Nikon D300	☑	☑
Nikon D300S	☑	☑
Nikon D3500	☑	☑
Nikon D3400	☑	☑
Nikon D3300	☑	☑
Nikon D3200	☑	☑
Nikon D3100	☑	✗
Nikon D3000	☑	✗
Nikon D4	☑	☑
Nikon D40	☑	✗
Nikon D5	☑	☑
Nikon D500	☑	☑
Nikon D5600	☑	☑
Nikon D5500	☑	☑
Nikon D5300	☑	☑
Nikon D5200	☑	☑
Nikon D5100	☑	☑
Nikon D5000	☑	☑
Nikon D60	☑	✗
Nikon D600	☑	☑
Nikon D610	☑	☑
Nikon D700	☑	☑
Nikon D750	☑	☑
Nikon D7500	☑	☑
Nikon D7200	☑	☑
Nikon D7100	☑	☑
Nikon D7000	☑	☑
Nikon D80	☑	✗
Nikon D810	☑	☑
Nikon D810A	☑	☑
Nikon D800	☑	☑
Nikon D800E	☑	☑
Nikon D850	☑	☑
Nikon D90	☑	☑
Nikon Df	☑	☑
Nikon Z50	☑	☑
Nikon Z6	☑	☑
Nikon Z7	☑	☑

Canon		
Model	Control	Live view
Canon EOS-1D Mark III	☑	☑
Canon EOS-1D Mark IV	☑	☑
Canon EOS-1D X Mark II	☑	☑
Canon EOS 100D	☑	☑
Canon EOS 1000D	☑	☑
Canon EOS 1100D	☑	☑
Canon EOS 1200D	☑	☑
Canon EOS 1300D	☑	☑
Canon EOS 200D	☑	☑
Canon EOS 2000D	☑	☑
Canon EOS 40D	☑	✗
Canon EOS 450D	☑	✗
Canon EOS 4000D	☑	☑
Canon EOS 5D Mark III	☑	☑
Canon EOS 5D Mark IV	☑	☑
Canon EOS 50D	☑	☑
Canon EOS 500D	☑	☑
Canon EOS 550D	☑	☑
Canon EOS 6D	☑	☑
Canon EOS 6D Mark II	☑	☑
Canon EOS 60D	☑	☑
Canon EOS 600D	☑	☑
Canon EOS 7D	☑	☑
Canon EOS 70D	☑	☑
Canon EOS 77D	☑	☑
Canon EOS 700D	☑	☑
Canon EOS 760D	☑	☑
Canon EOS 80D	☑	☑
Canon EOS 800D	☑	☑
Canon EOS 90D	☑	☑
Canon EOS M	☑	✗
Canon EOS M50	☑	✗
Canon EOS M5	☑	✗
Canon EOS M6	☑	✗
Canon EOS M6 Mark II	☑	✗
Canon EOS M100	☑	✗
Canon EOS M200	☑	✗
Canon Rebel T3	☑	☑
Canon Rebel T5	☑	☑
Canon Rebel T6	☑	☑
Canon EOS R	☑	☑
Canon EOS RP	☑	☑
Canon PowerShot SX70 HS	☑	☑
Canon PowerShot G5 X Mark II	☑	☑
Canon PowerShot G7 X Mark III	☑	☑

Sony*		
Model	Control	Live view
Sony α7	☑	☑
Sony α7 II	☑	☑
Sony α7R	☑	☑
Sony α7R II	☑	☑
Sony α7S	☑	☑
Sony α5000	☑	☑
Sony α5100	☑	☑
Sony αv6000	☑	☑
Sony α6300	☑	☑
Sony α6500	☑	☑
Sony NEX-5R	☑	☑
Sony NEX-5T	☑	☑
Sony NEX-6	☑	☑
Sony HX60	☑	☑
Sony HX80	☑	☑
Sony HX90	☑	☑
Sony HX400	☑	☑
Sony WX500	☑	☑
Sony RX10 II	☑	☑
Sony RX100 III	☑	☑
Sony RX100 IV	☑	☑
Sony RX100 V	☑	☑
Sony FDR-X3000R	☑	☑
Sony FDR-X1000V	☑	☑
Sony HDR-AS50	☑	☑
Sony HDR-AS300R	☑	☑
Sony DSC-QX30	☑	☑
Sony DSC-QX100	☑	☑
ONLY WIFI CONNECTION IS SUPPORTED		